The Geek Page

You'll Need a New App to Open This exe File Error in Windows 10 / 11

(https://thegeekpage.com/author/madhu/)


NOVEMBER 26, 2021 By MADHUPARNA (HTTPS://THEGEEKPAGE.COM/AUTHOR/MADHU/)

Windows 10 is constantly evolving with a new update time and again. However, it still comes with lots of issues like PC boots slowly, unable to play DVD movies, not enough space to install Windows 10, and many more. One such issue is the "You'll need a new app to open this .exe file" error in Windows 10.

This error can be really frustrating when you are trying to open an executable file and the error pops up. The error does not allow you to open the file and that's when you should troubleshoot the problem with immediate effect. While some issues are relatively easier to solve, some can be really challenging. However, solving this error is pretty easy. Let's find out how to fix the error while opening a .exe file.

How to Fix You'll Need a New App to Open This .Exe File Error in Windows 10


Step 1: Click on the **Windows** icon on your desktop and type **Regedit** in the search box. Now, right-click on the result and click on **Run as Administrator** to launch the **Registry Editor**.

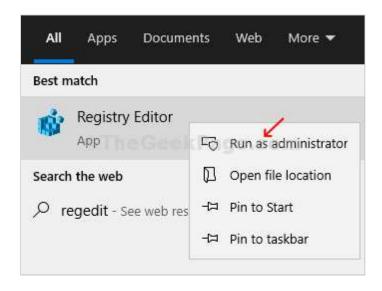

Step 2: In the **Registry Editor** window, navigate to the below path:

HKEY_CLASSES_ROOT\exefile\shell\open\command


The **command** sub-key is highlighted on the left side of the pane. Now, on the right side of the pane, right-click on the string named **Default**. Click on **Modify** to open the **Edit String** pop up.

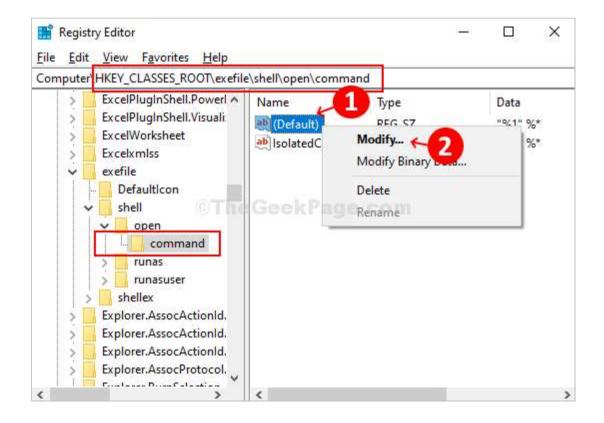

Step 3: In the **Edit String** pop up, change the **Value data** to the value given below.

```
"%1" %*
```


Press **OK** to save the changes and exit.

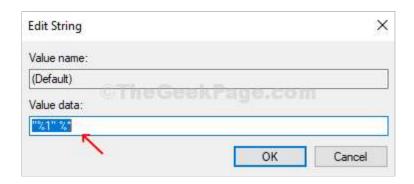

Step 4 – Now, go to the following path in registry editor.

Step 5 – Double click on **Default** on the right side and make sure its **value data** is **exefile**.

If not change it to exefile.

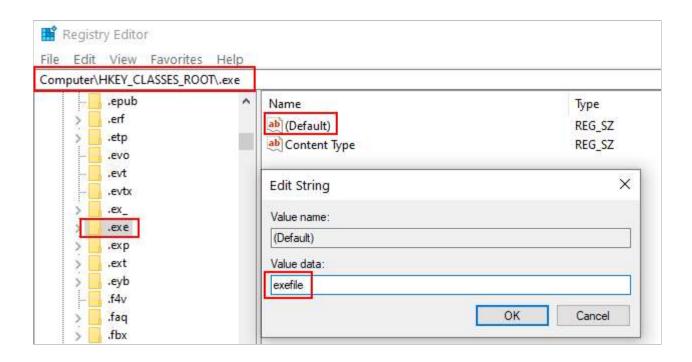


Step 4 – Now, go to the following path in registry editor.

HKEY_CLASSES_ROOT\exefile

Step 5 – Double click on **Default** on the right side and make sure its **value data** is **Application**.

If not change it to Application.

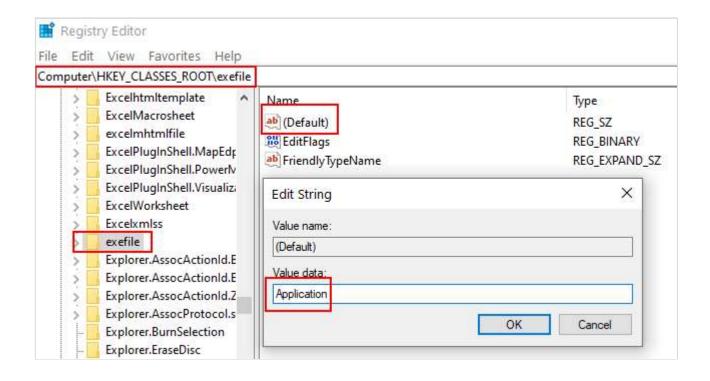


Reboot your system and try opening a .exe file to check if it's opening and does not show the error. Your "You'll need a new app to open this .exe file" error in Windows 10 should be resolved now.


Note: – If this does not work, repeat this method while booting in safe mode.

Method 2 – Reset Windows store


1. Click on **Start** Button and then Gear shaped icon to open settings panel.

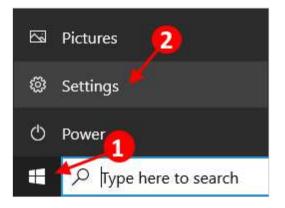

- 2. Click on Apps.
- 3. Search **store** in the search box on the right.
- 4. Click on **Microsoft store** from the search result.
- 5. Now, Click on Advanced options.

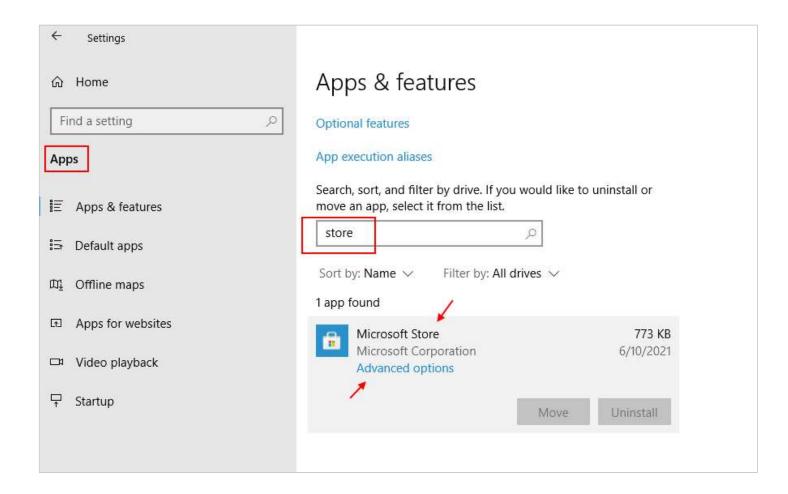


6. Now, Scroll down and Click on **Reset** and reset Microsoft store.

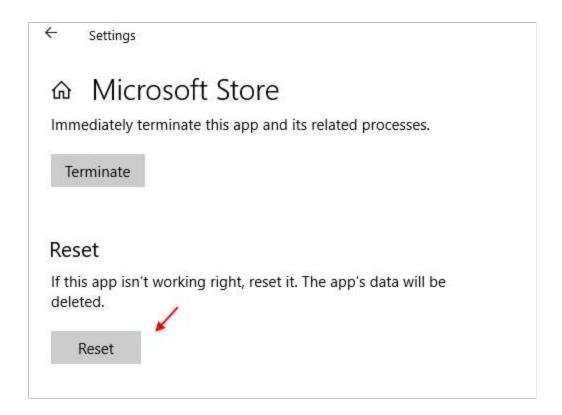

For Windows 11 users

- 1 Press **Windows key + R** keys together to open run command box.
- 2 -Now, Click on Apps from the left menu,
- 3 -Now, click on **Installed apps** from the left menu.
- 4 Now, search **store** in the starch box
- 5 -Click on 3 vertical dots and click on advanced options.

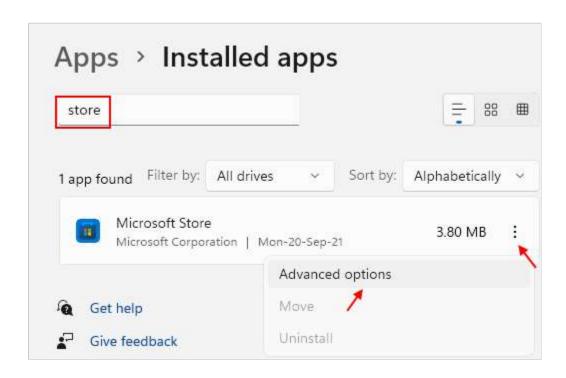

4 – Now, Click on **Reset**.

